

The VP is located at the cattle grid just to the south of the Forsinard Train Station on the A897. There is a small area at the VP where vehicles can be parked if safe to do so. Or they can be left in the parking area near the train station and the VP can be accessed on foot by walking along the verge.

FIGURE 4.11a **VP11: Forsinard** Drawing No. - 121002-D-SI4.11a Revision - 1.0.0 Date - 13/07/2021